

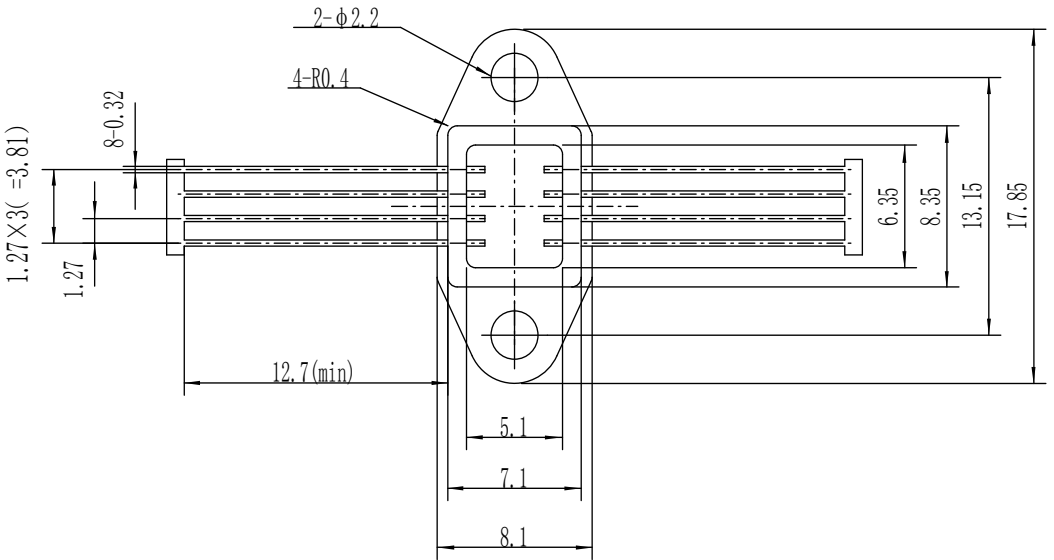
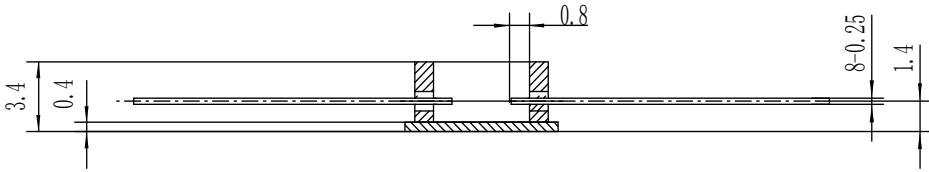
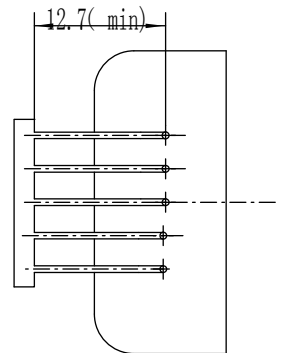


# FP0807 - 08

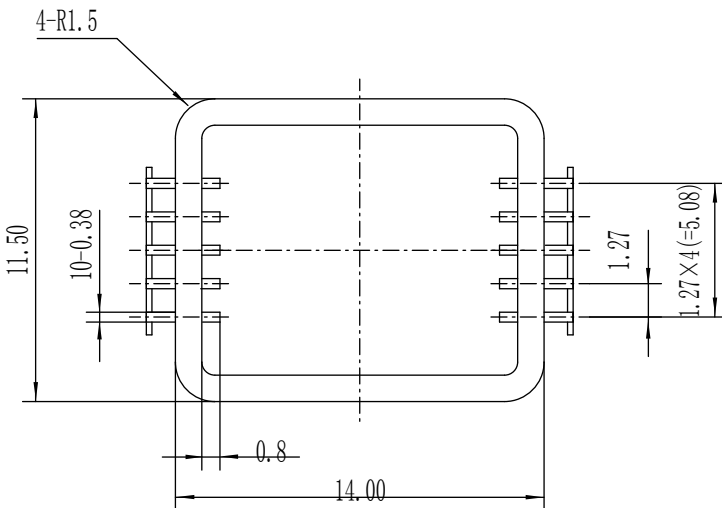



Base Material: Kovar

# FP1412 - 10

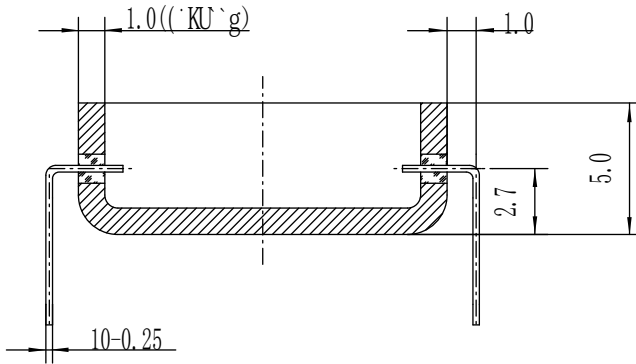



Base Material: Kovar

# FP2018 - 07

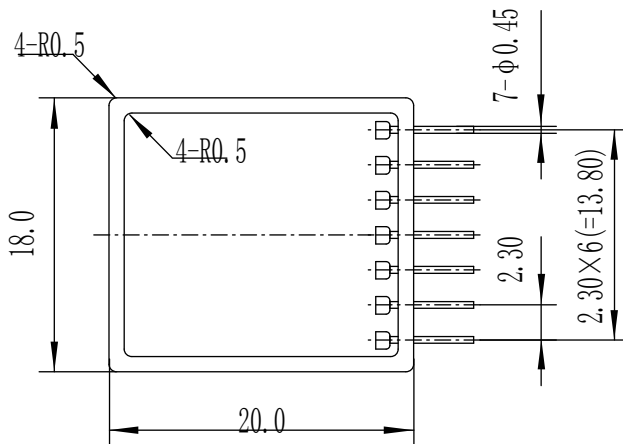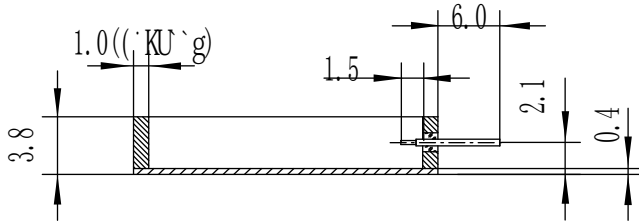



Base Material: Kovar

# FP2313 - 06

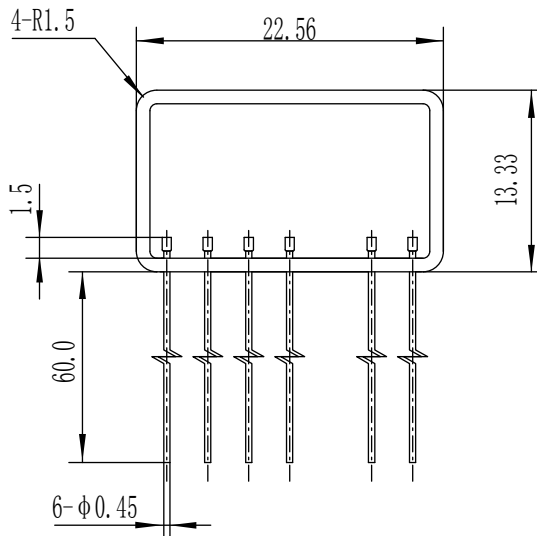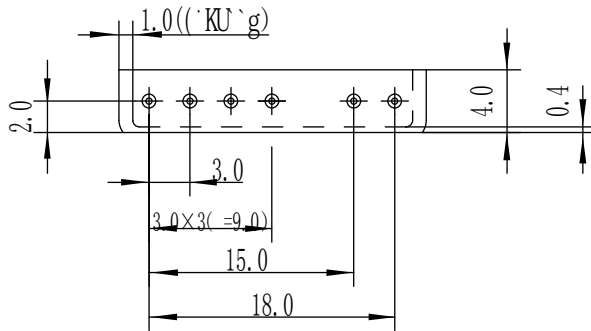



Base Material: Kovar

# FP2525 - 30

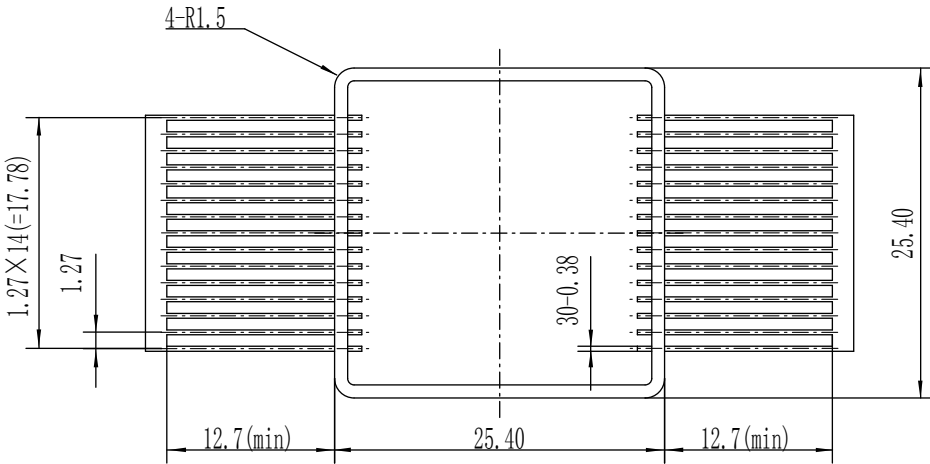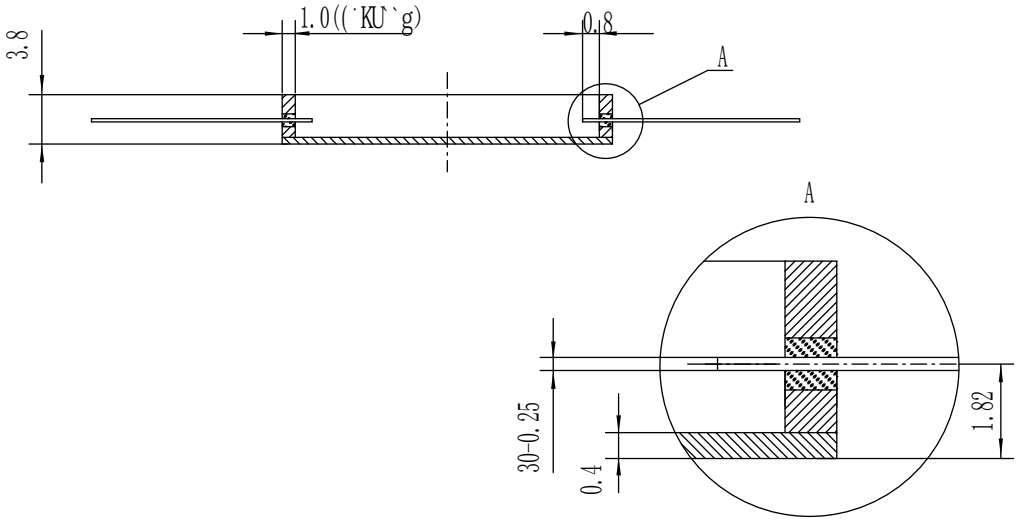



Base Material: Kovar

# FP3020 - 09

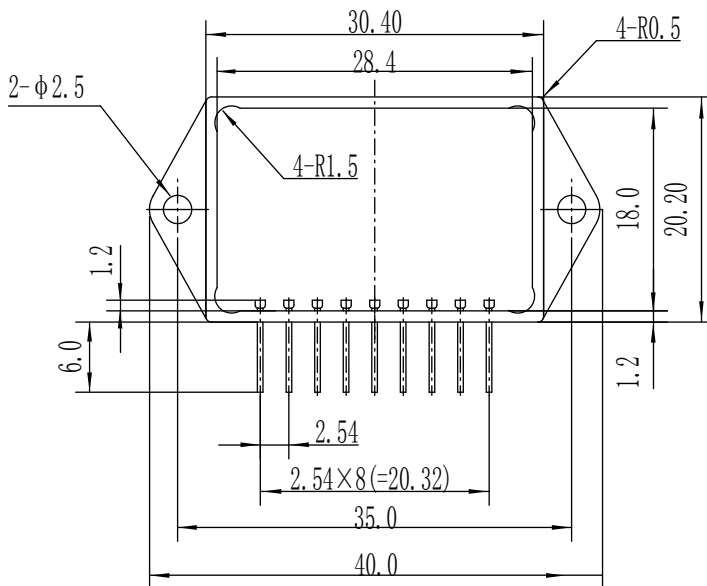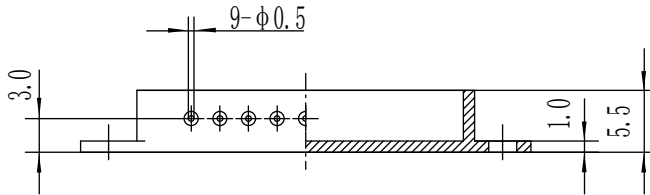


Base Material: Kovar

# FP3232 - 24

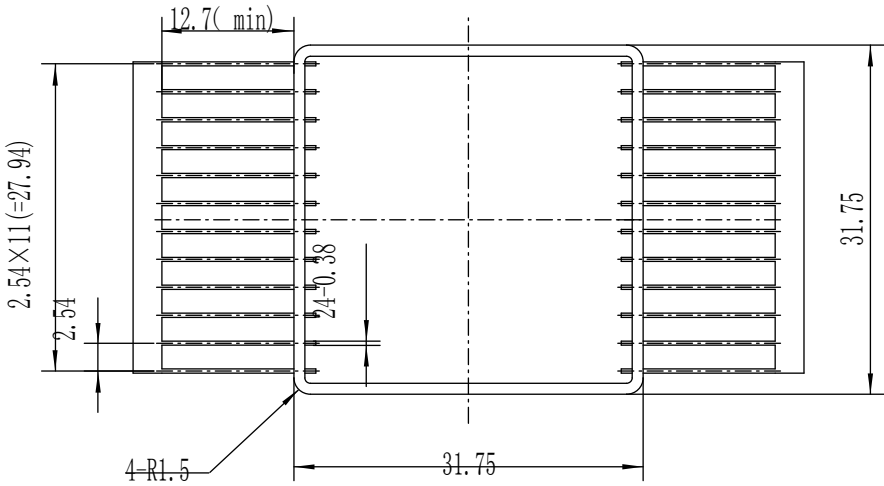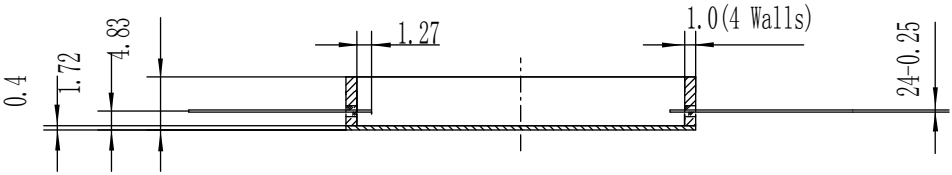

Base Material: Kovar



# FP3232 - 44

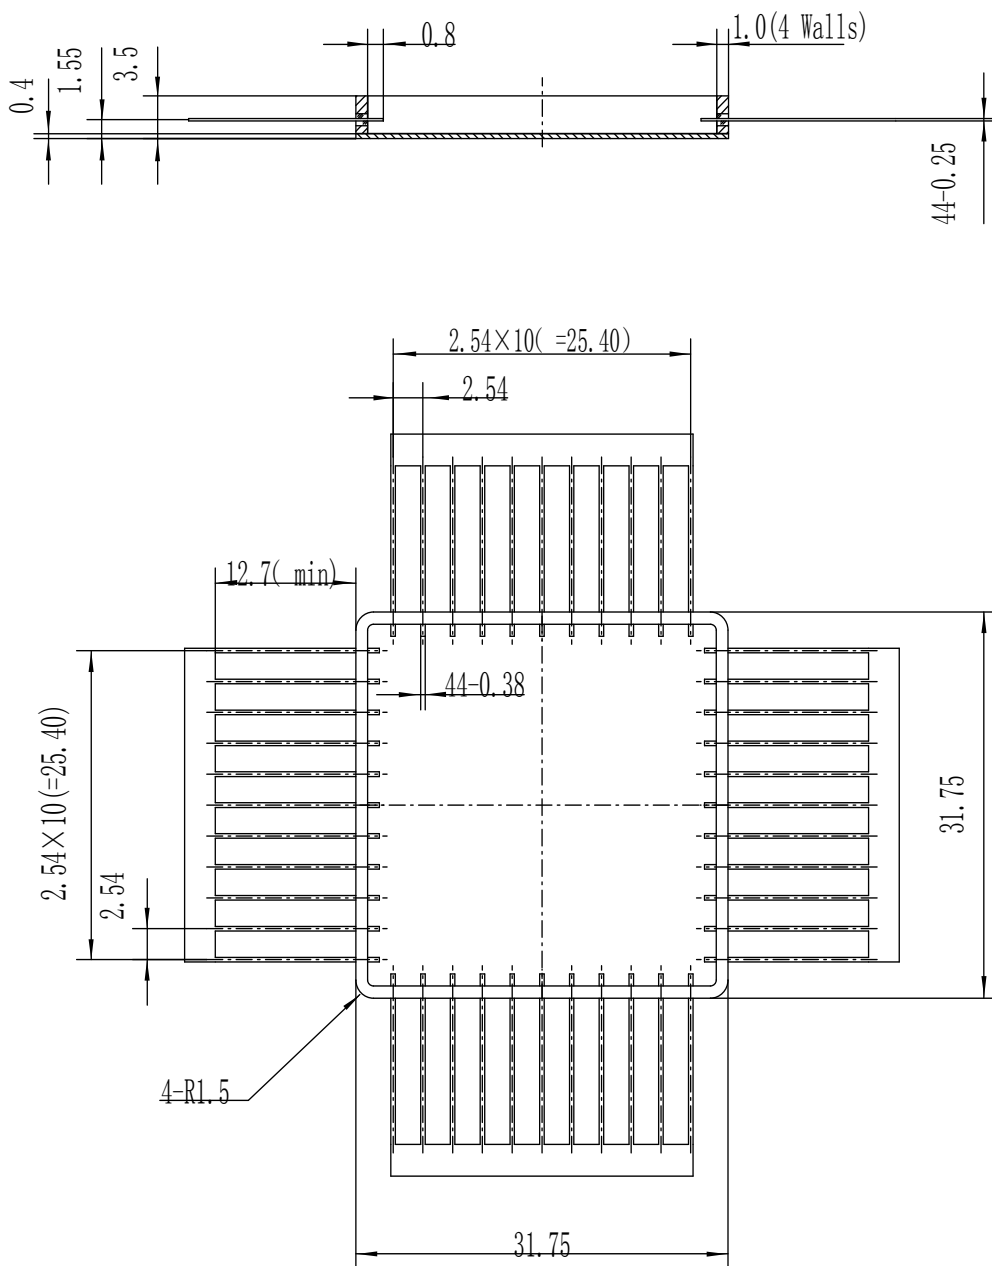

Base Material: Kovar




# FP3925 - 16

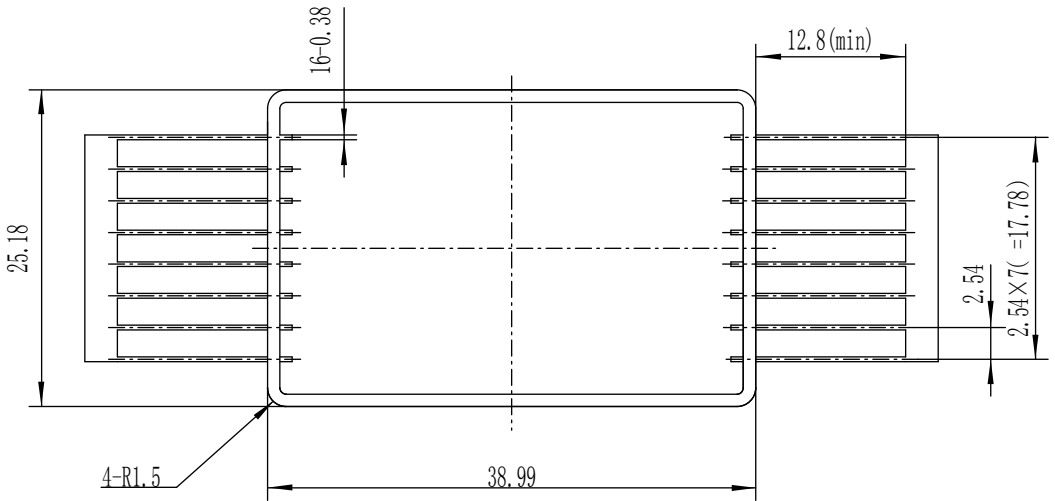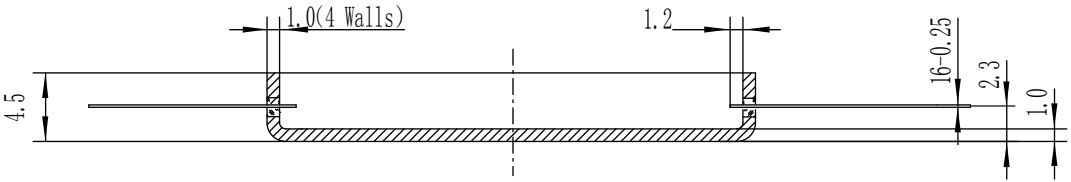


Base Material: Kovar

# FP4545 - 100

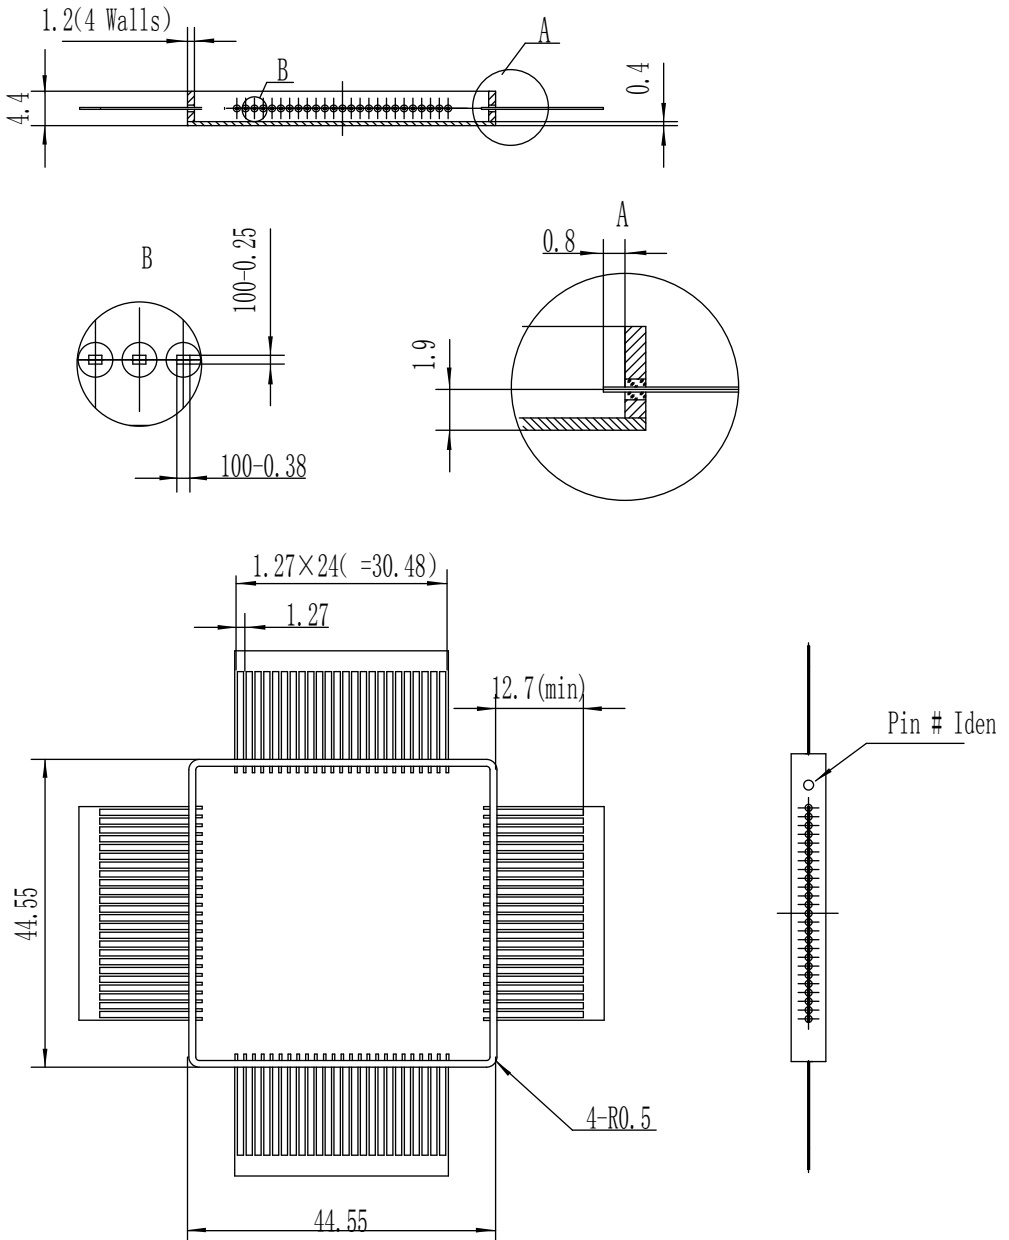

Base Material: Kovar

# FP5129 - 74

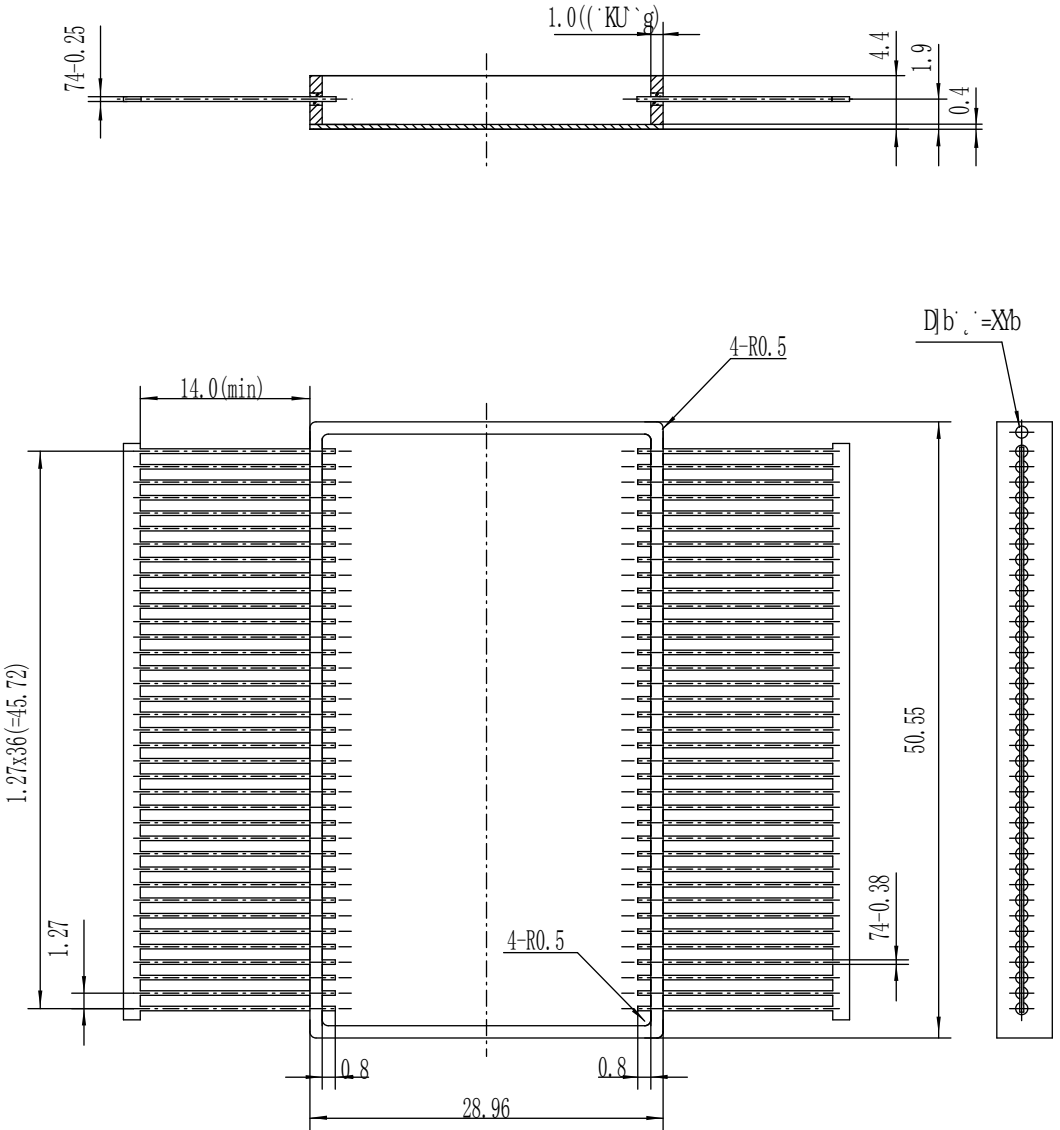

Base Material: Kovar