





# TO254

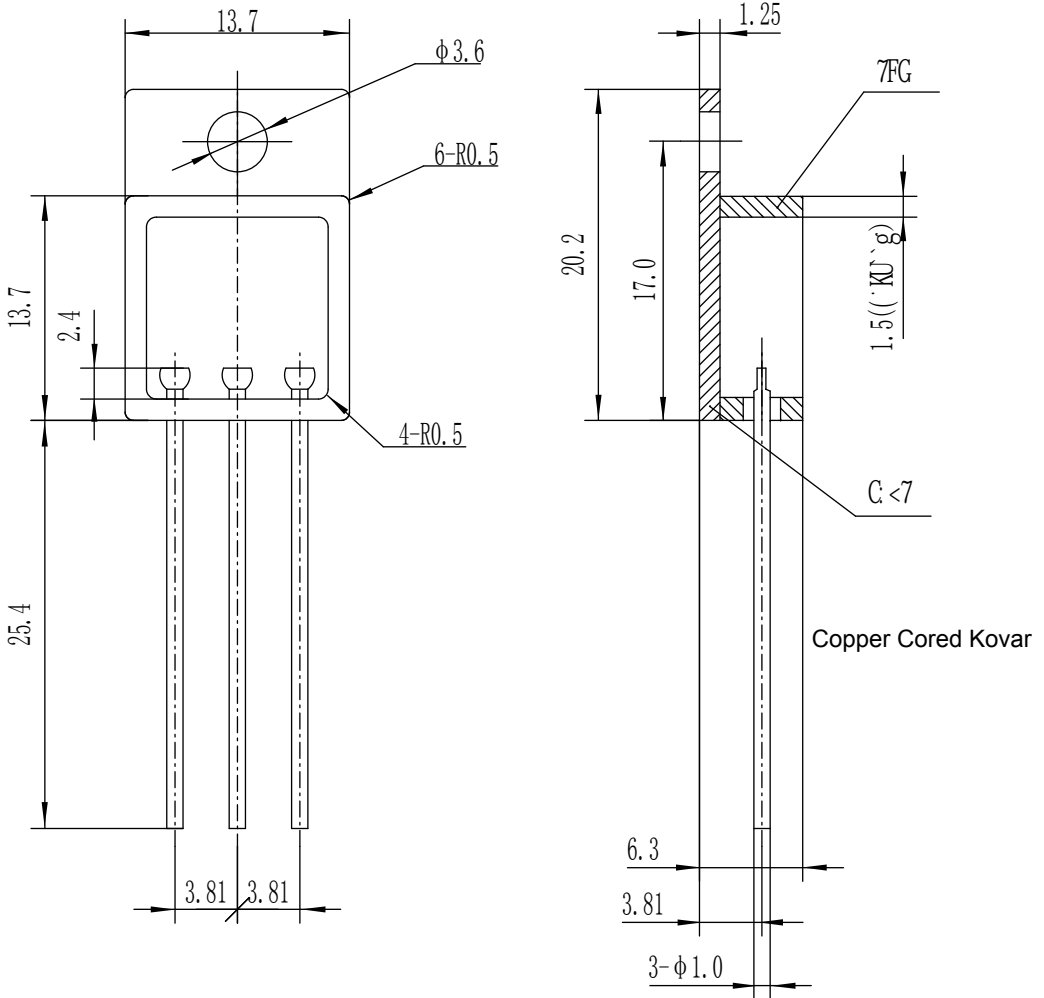

# T0257


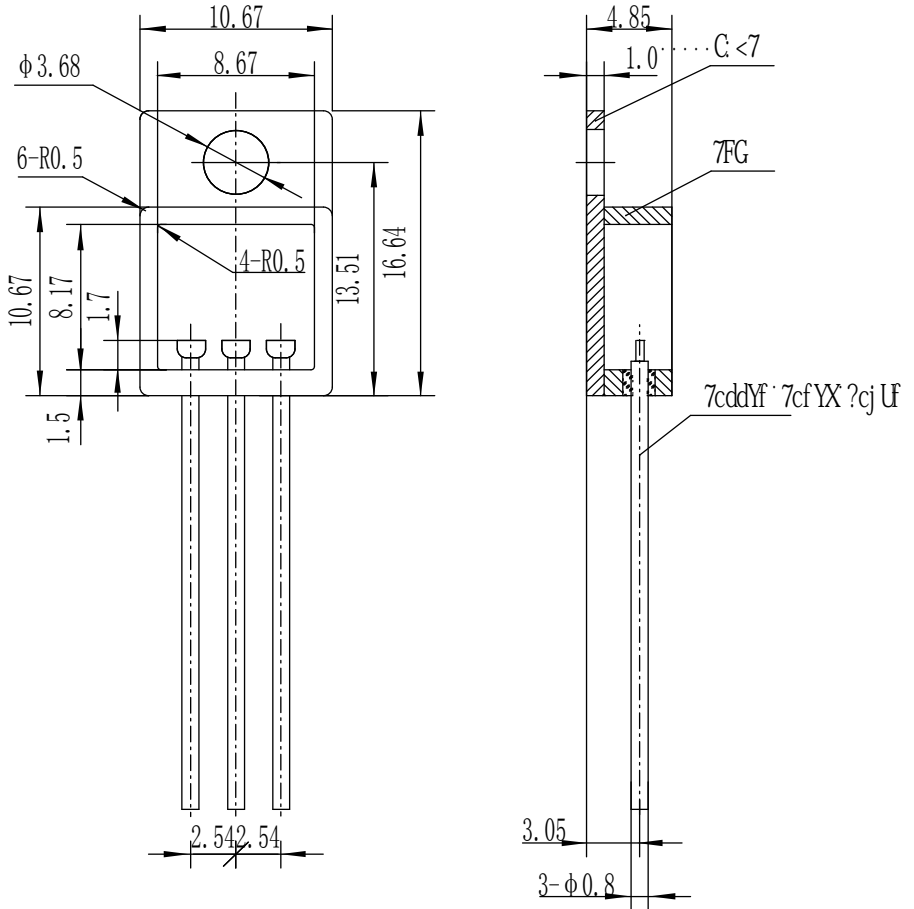


# T013 - 12

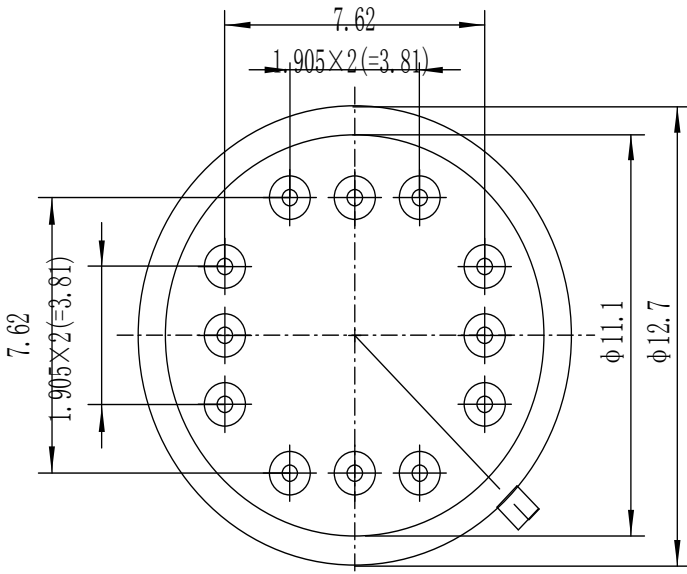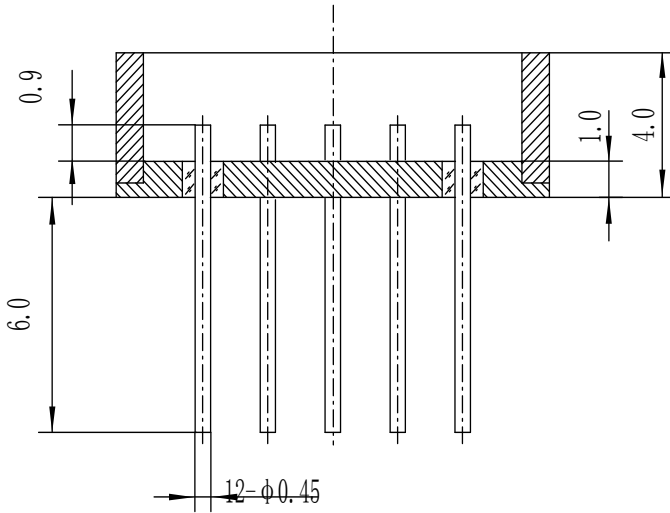



Base Material: Kovar

# TO21 - 13

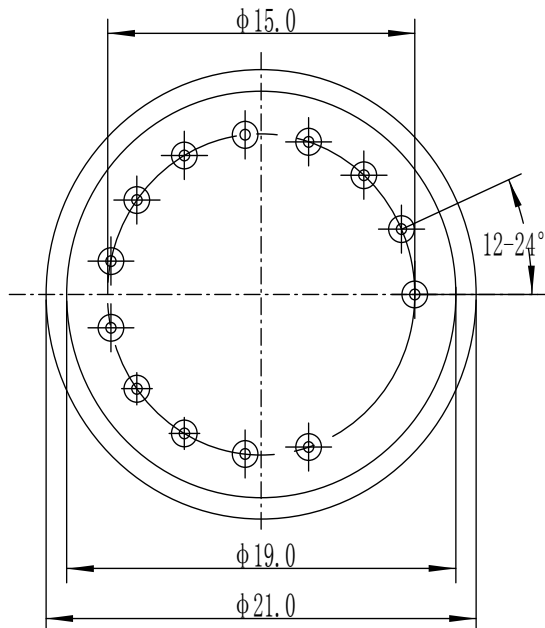
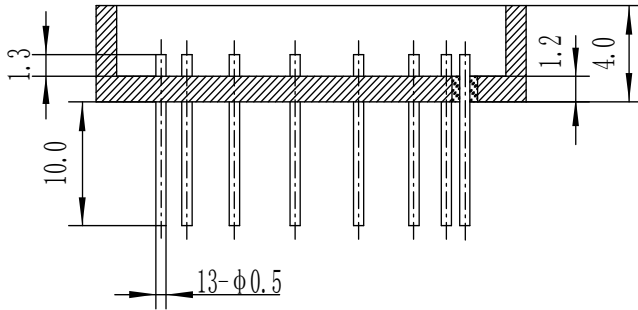


Base Material: Kovar

# T025 - 13

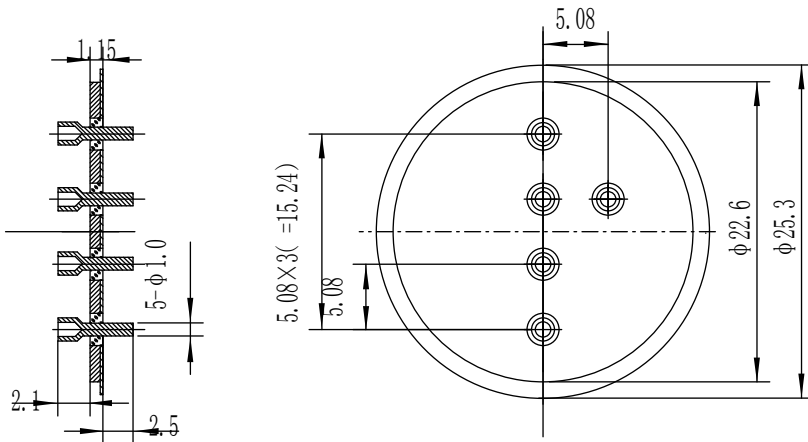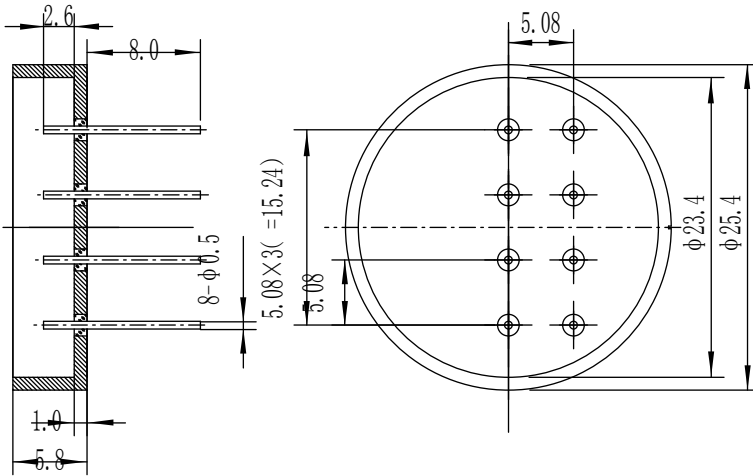


Base Material: Kovar

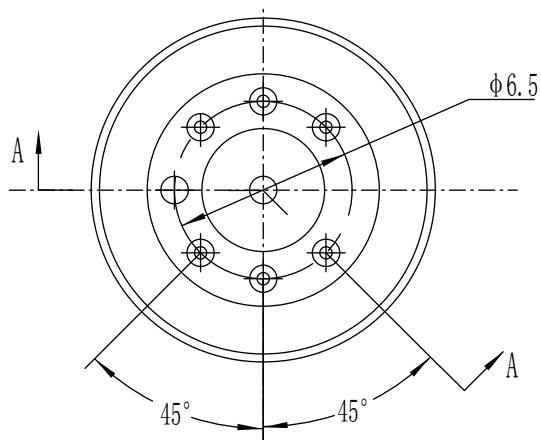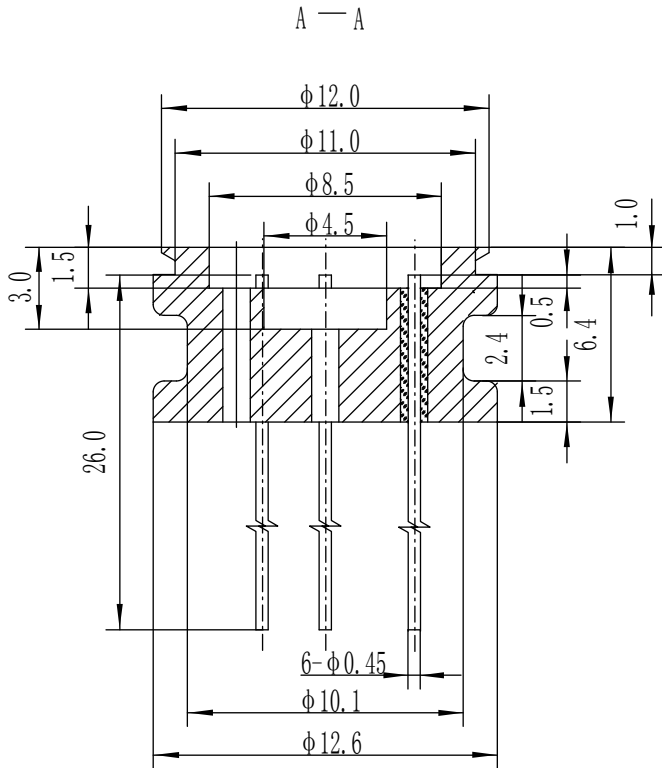**TO13 - 06**


Base Material: CRS

# TO19 - 06

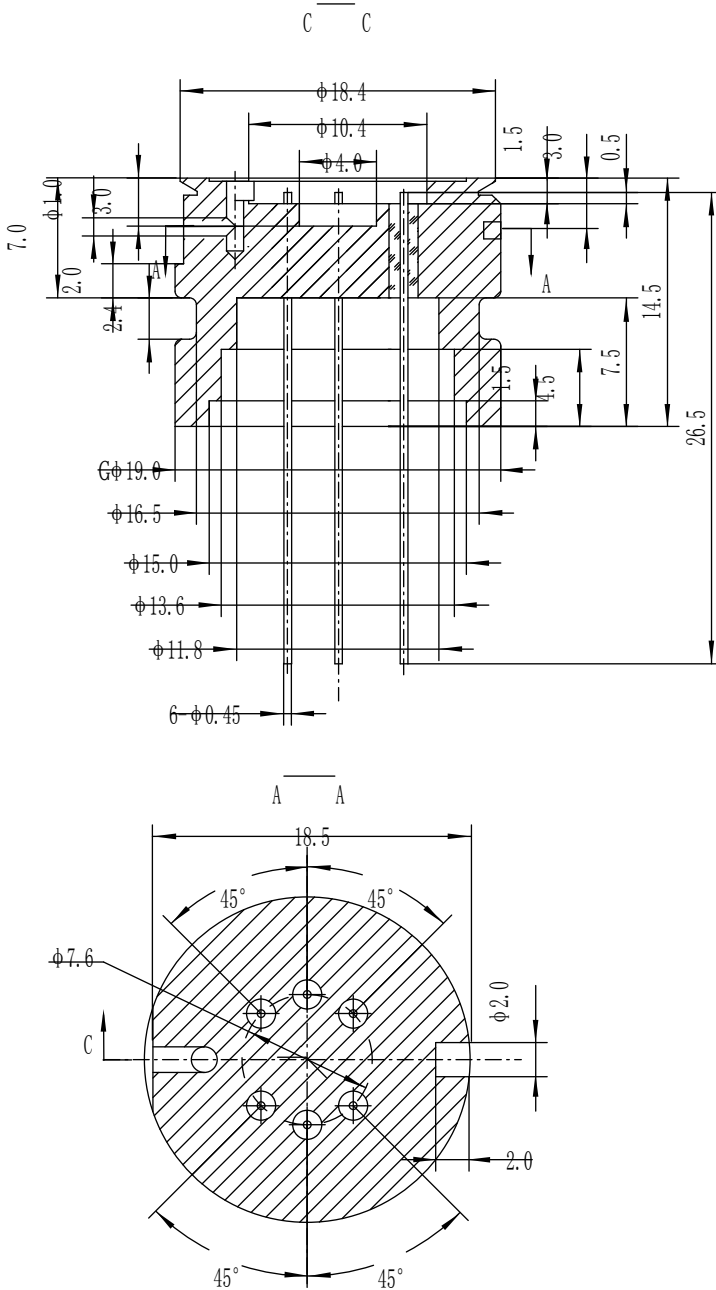


Base Material: CRS

# TO20 - 06

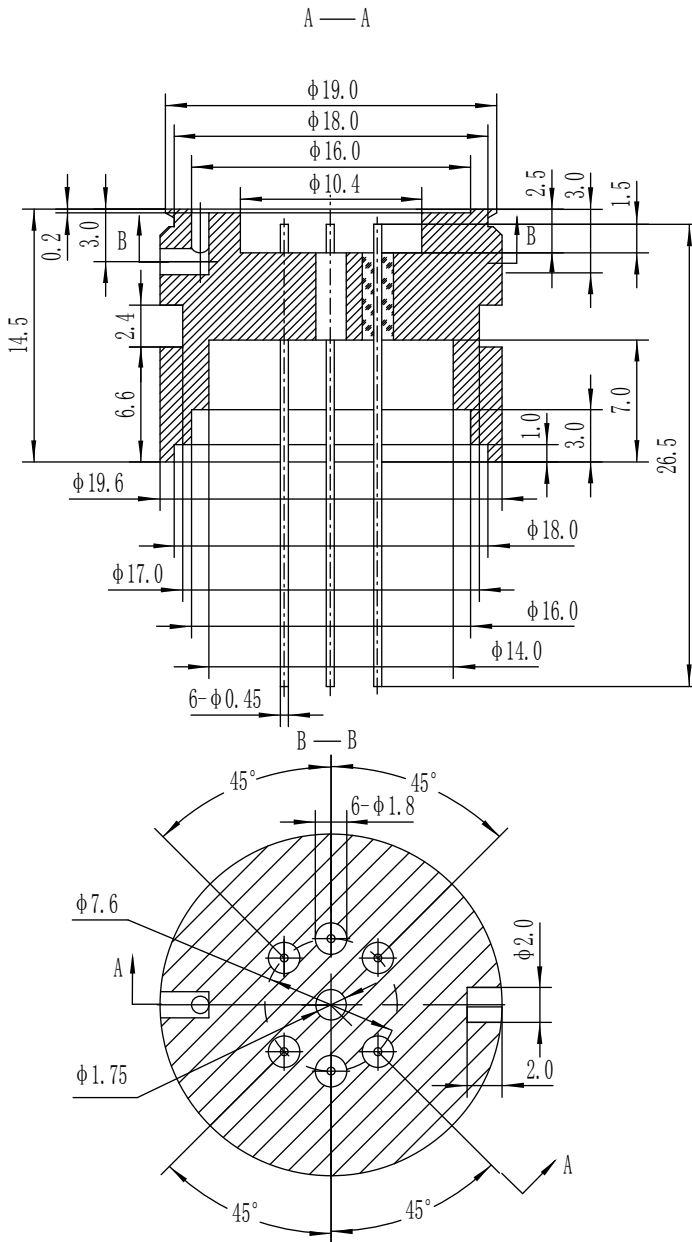



# SP11830 - 02

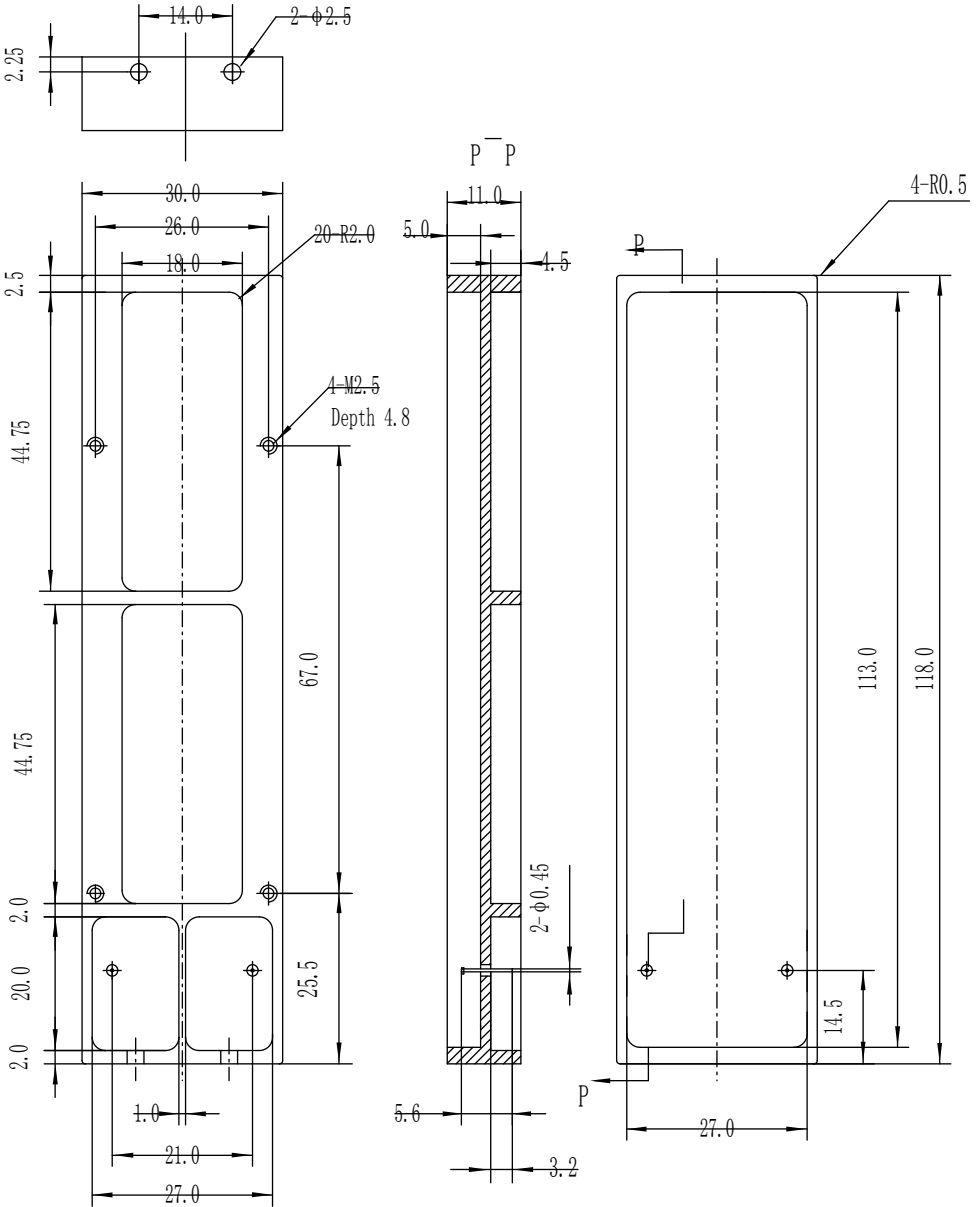

Base Material: Kovar